




FD300 & FD600

v.5

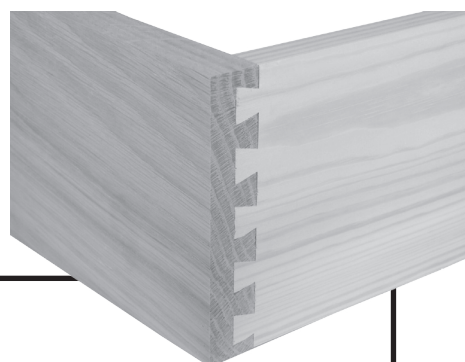


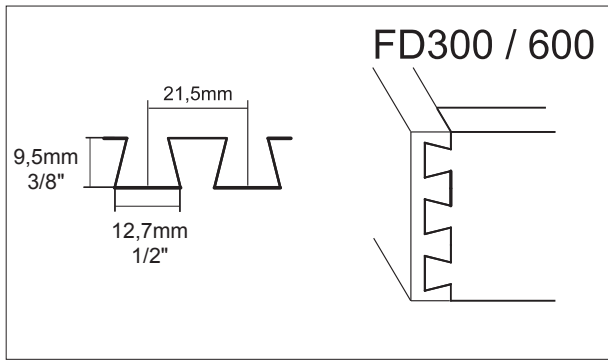


A1

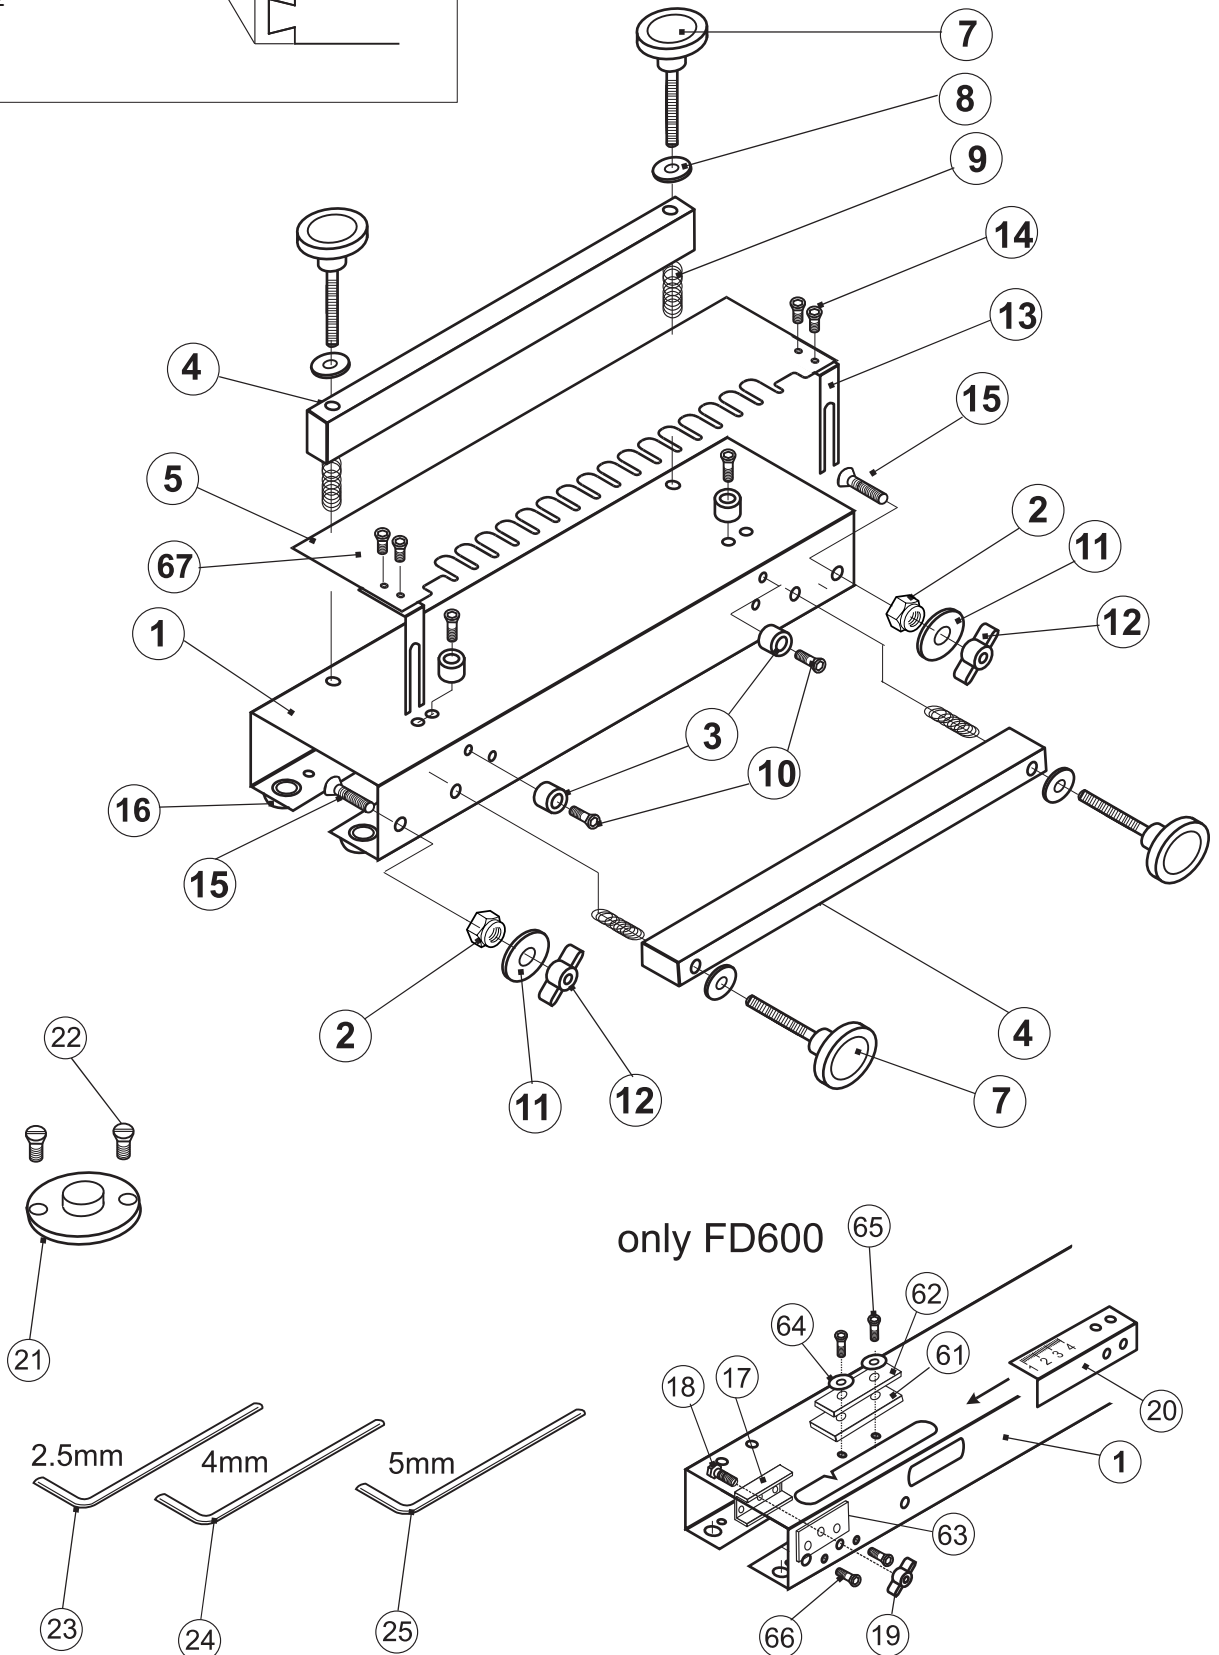


A2

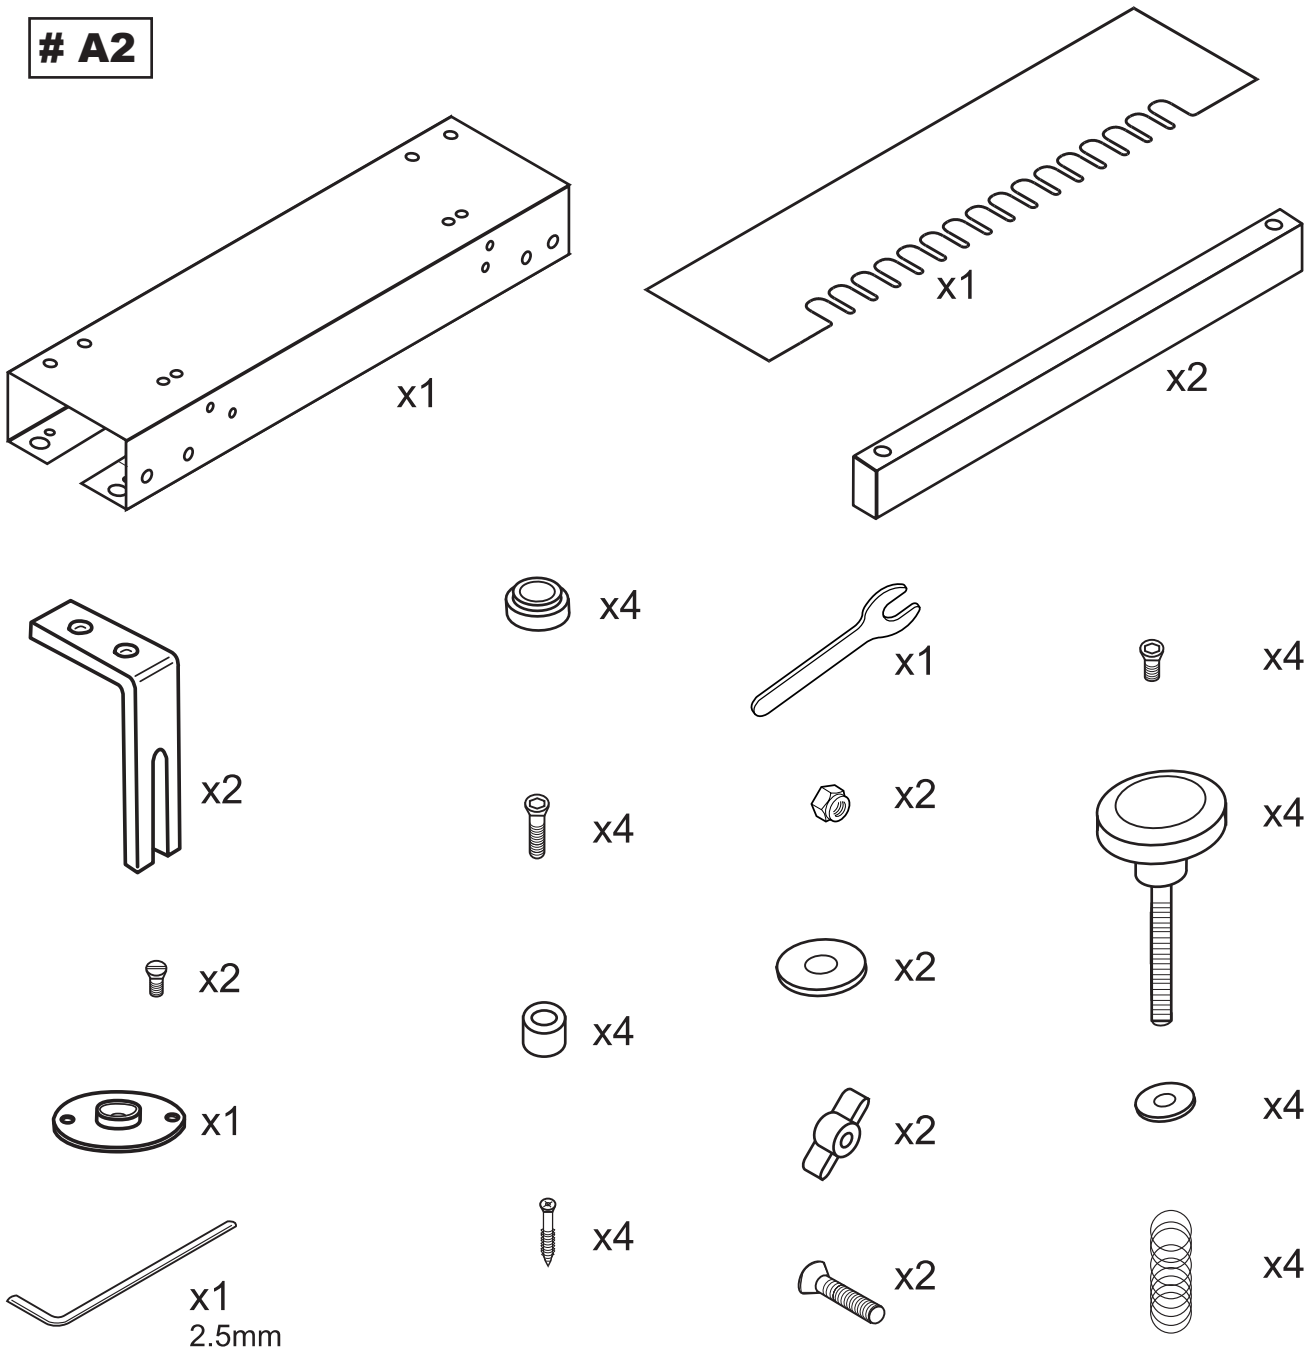


only FD300

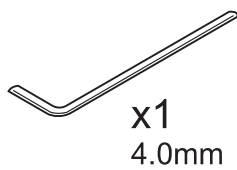


only FD600

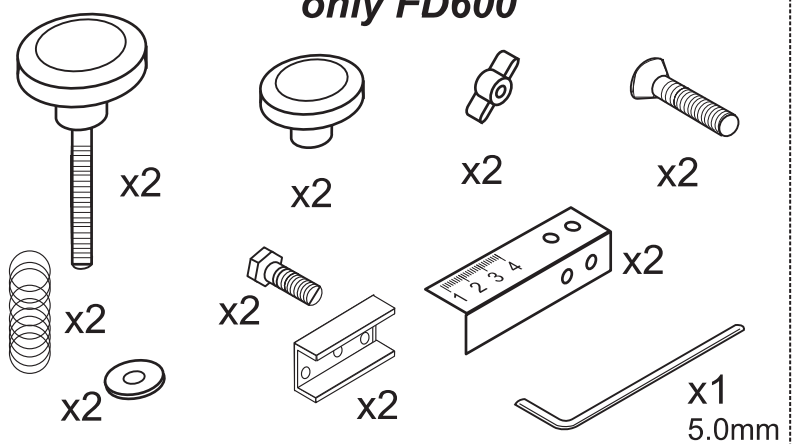


B1

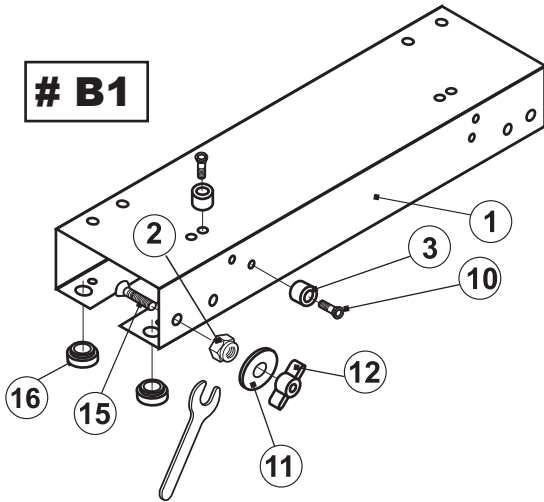

B4

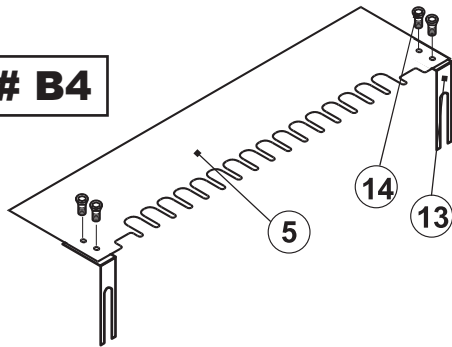

B5

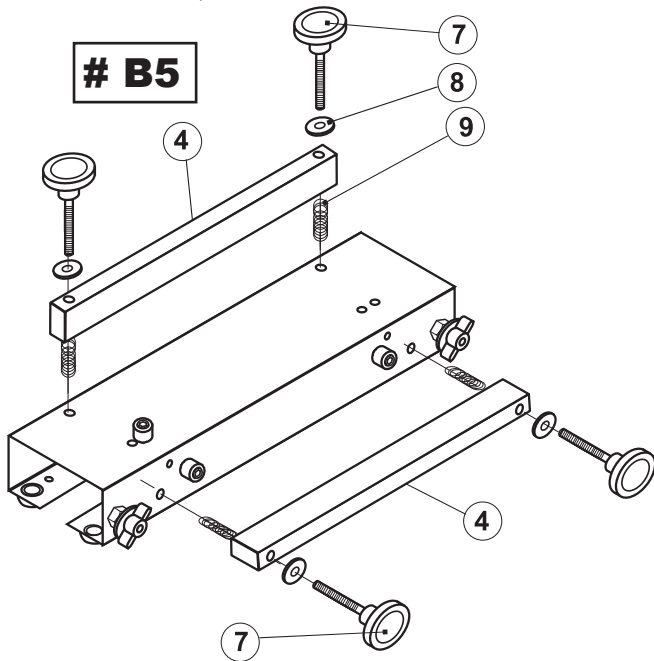


B7




B2


only FD600

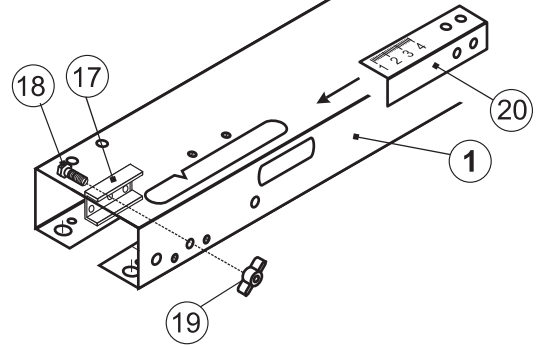


B3

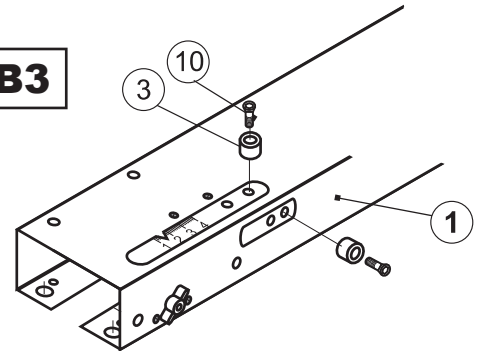

B6

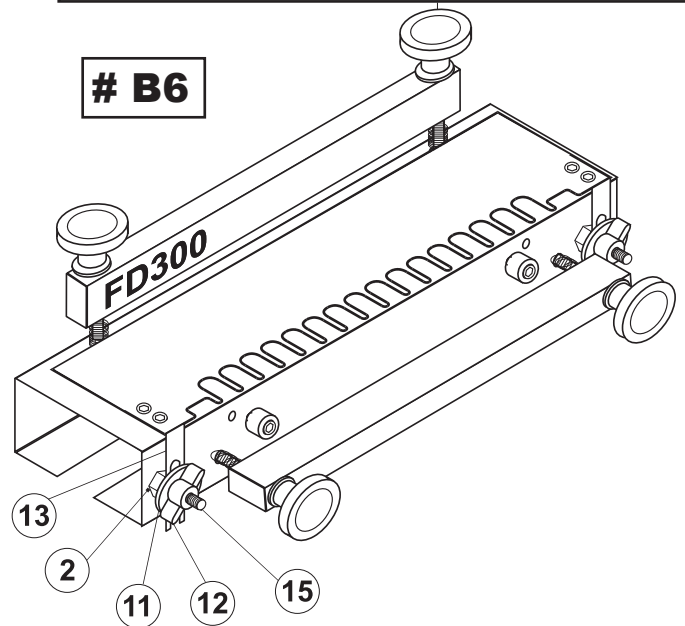


C1

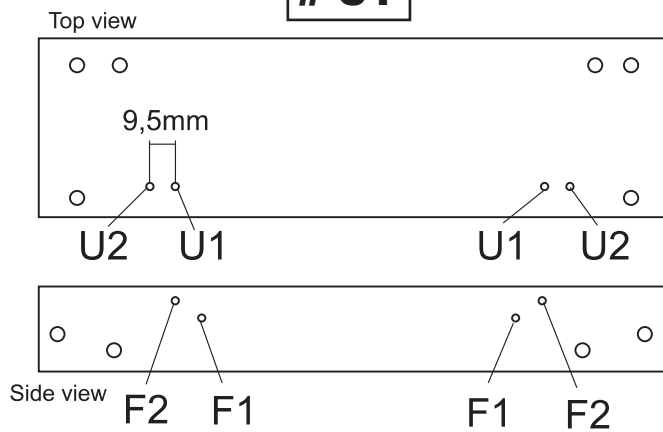


C2


only FD600

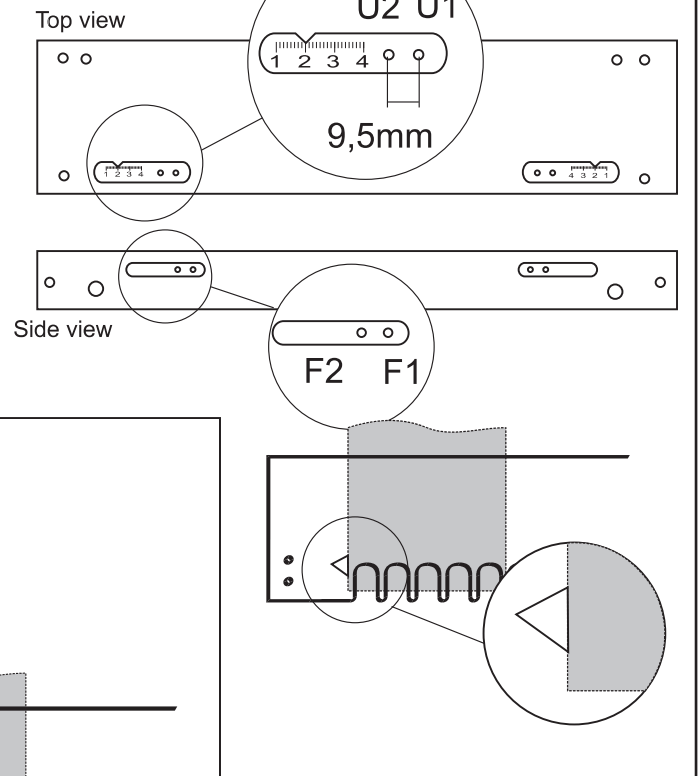


C3

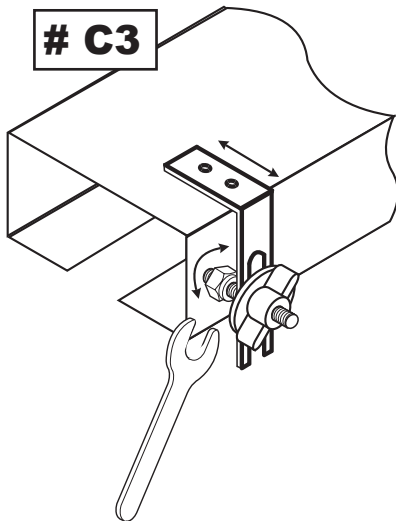


C4

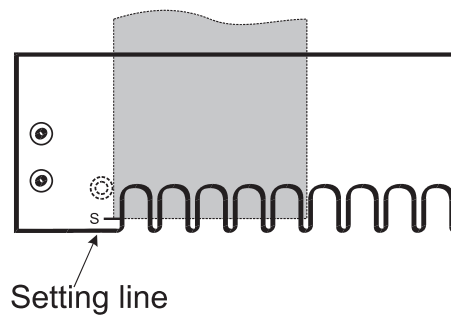


D1

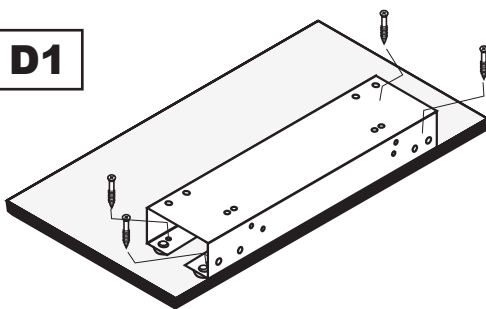


D2

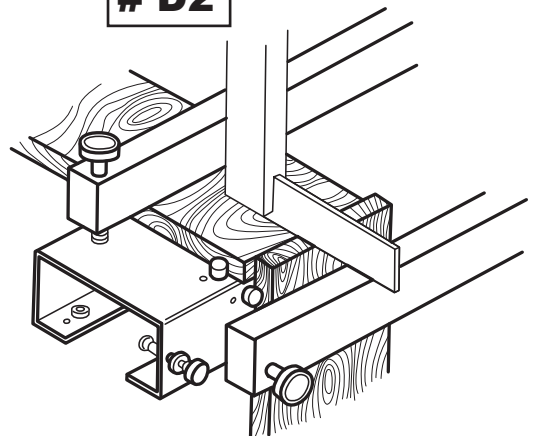


D3

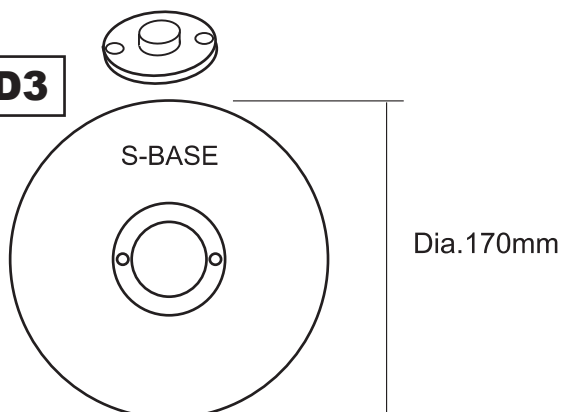


D4

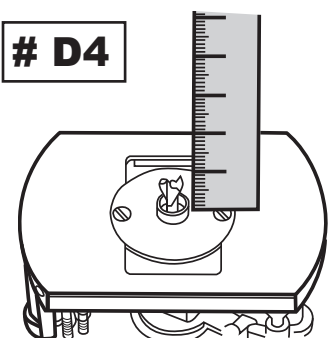


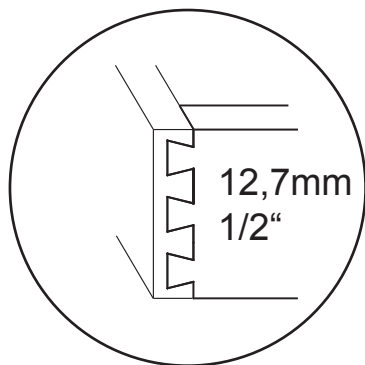

E1

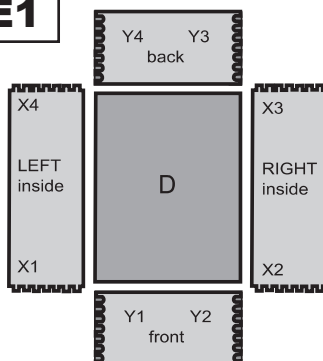

E2

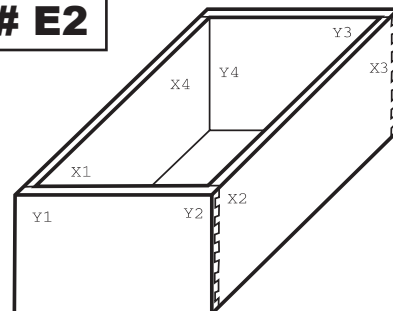


E3



E4



E5

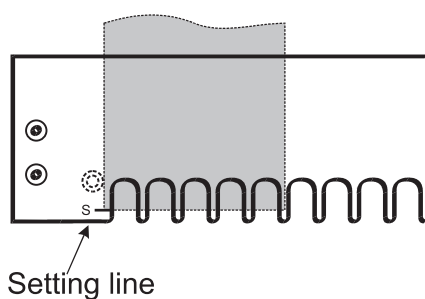


E6




E7




E8

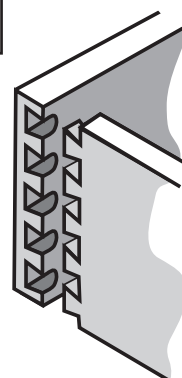


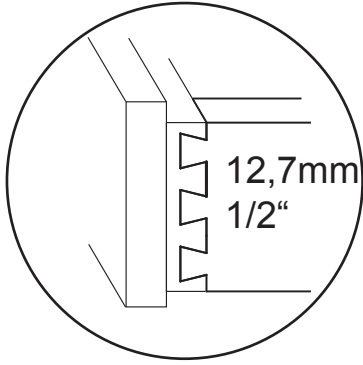


F1

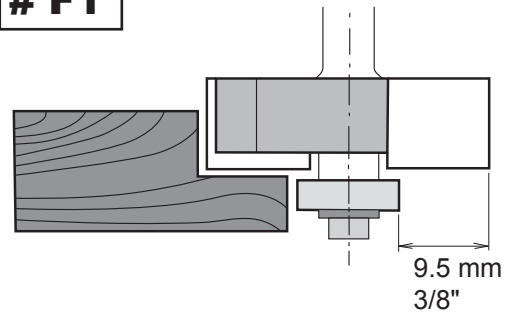


F2

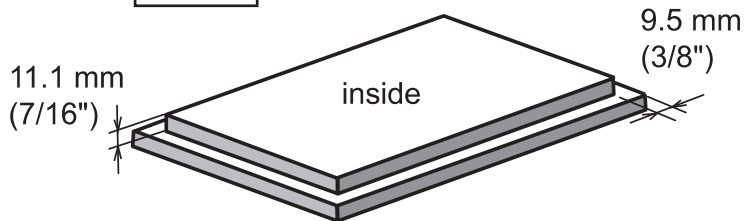



F3

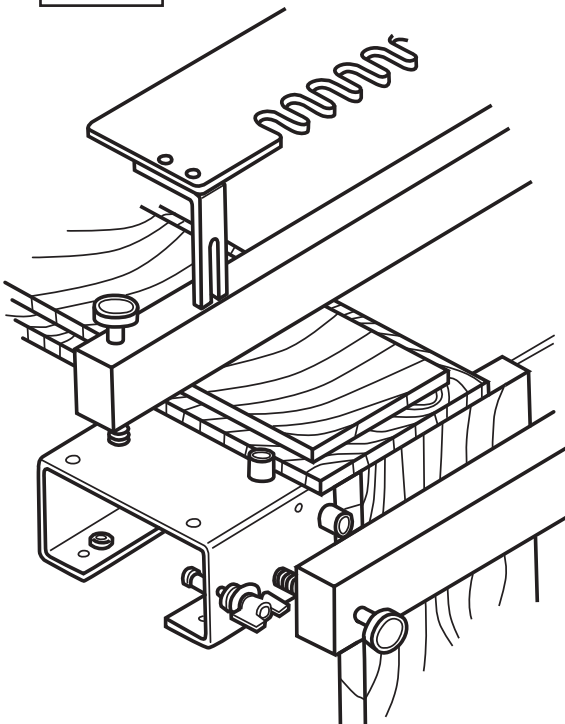



F4

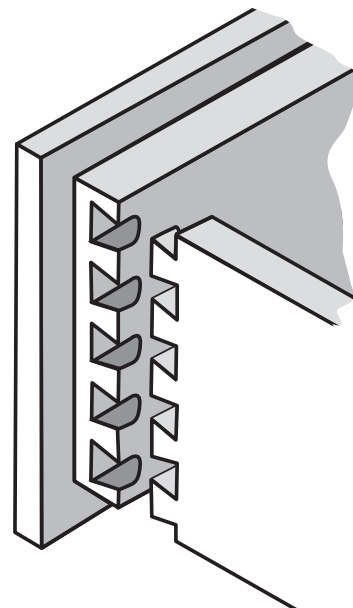



FD3080 / 6080

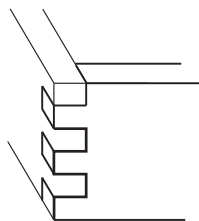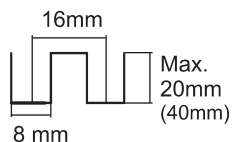



FD3130 / 6130

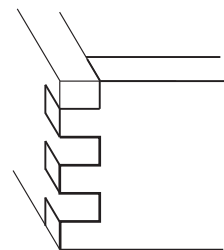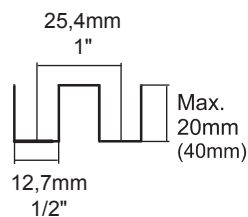

FD3170 / 6730

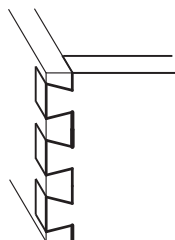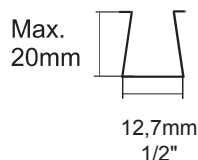

FD3190 / 6190

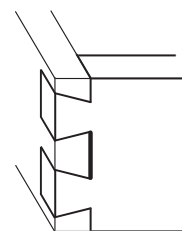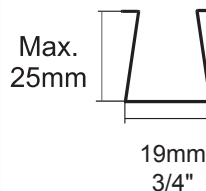

FD3350 / 6350

